


KENWEI

3.5" COLOR TFT VIDEO DOOR PHONE

INDOOR MONITOR

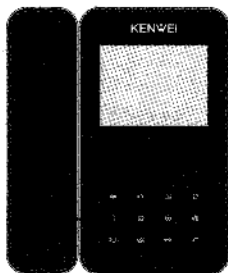

- | | |
|-------------------------------------|-------------------------------------|
| <input type="checkbox"/> S350C | <input type="checkbox"/> S351C |
| <input type="checkbox"/> S350C-W32 | <input type="checkbox"/> S351C-W32 |
| <input type="checkbox"/> S350C-W64 | <input type="checkbox"/> S351C-W64 |
| <input type="checkbox"/> S350C-W200 | <input type="checkbox"/> S351C-W200 |

CE FC U R&TTE RoHS
ISO9001 ISO14000 OHSAS18001

Content

Product Introduction	3
Feature and parts	4
Operation	6
Special function	15
Operation of color image memory	17
Instruction of B&W image memory	17
Operation for B&W image memory	17
Instruction of LED status	20
Voice indication	20
TFT screen indication	20
OSD menu operation	21
Trouble shooting guide	23
Specification	24

Remark

* KENWEI reserves the right to change or modify designs and specifications without any prior notice for the improvement and promotion of products' quality. Please refer to the real products.

Thank you for purchasing our product of building intercom series. Please read the instructions carefully and follow the directions before installing the product. Any problem regarding the product, please inquire your supplier.

General features

- Monitor and remote unlock
- Kinds of chord ring and Dingdong sound (optional) with clear tone
- 4:3 screen design
- Color, brightness and contrast etc. adjustable.
- No bother (mute) function
- Support color B&W image memory (optional)
- Color memory supports max. 16G SD card (512M standard configuration)
- Pedal control and 2nd door calling function (optional) **Attention: users can only select one.**
- 4 grade ring volume adjustable
- Touch button
- Connect with 2pcs CCTV cameras
- 0-100 grade talk volume adjustable (S351 series)
- Intercom and call transfer between indoor monitors (support max. to 4 monitors)
- Hands-free talk (S351 series)
- Extension ring output (optional)
- Extension switch for multi-function (optional)




CAUTION: To avoid the risk of electric shock, please don't remove cover or back. Please ask professional person if maintenance needed.




Remind users that important operation and maintenance guide are included in the attached user's manual.

Feature and parts

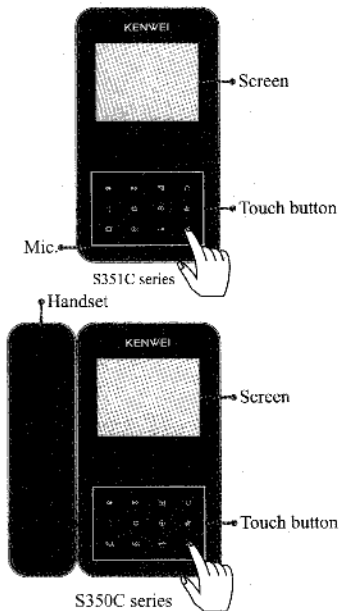

Touch buttons:



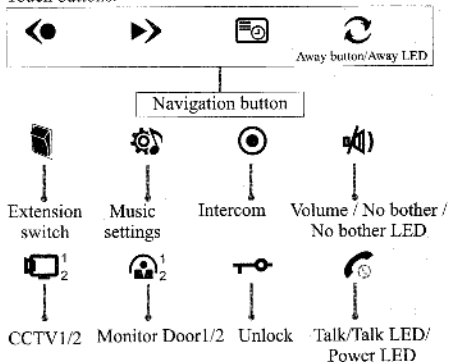


Remark

During operation, please touch the center of buttons (as the above pictures showing)

Feature and parts

 VD-R ON OFF position

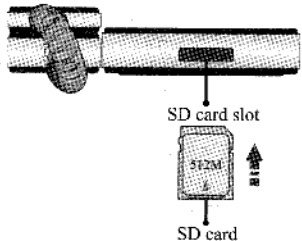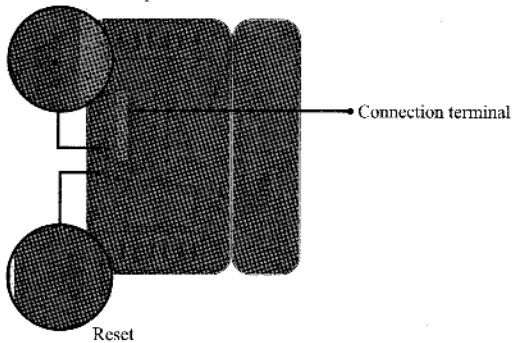


Remark

Insert SD card: insert the SD card to the slot according to the picture indicated direction.
Remove SD card: push the SD card slightly by finger, it will be pulled out automatically.
Remark: 1. Pay attention to the direction of SD card when inserting.
2. SD card could only be used in monitors with color memory.


Operation

1. ON/OFF

- a. After connecting to power, the unit will enter into standby mode automatically, with power LED on.

Under OFF mode, touch “” button (Pic.1), it will sound “DU” , with the unit turns on to standby mode, and power LED on.

- b. Under standby mode, touch and hold the “” button (Pic.1) till it sounds “DU” , means the unit enter into OFF mode and power LED off.

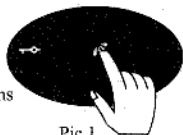


Pic.1

2. Call remind


When outdoor camera calls in, indoor monitor will display images from outdoor camera automatically, showing “CH1” or “CH2” on the screen, and power LED flash, meanwhile sound the ring.

3. Talk /Stop


a. Talk (when outdoor camera calls in)

Touch “” button (Pic.1) to enter into talk mode, outdoor unit can talk with indoor monitor. (S351C series).
Pick up the handset enter into the talk mode. (S350C series).

b. Monitor to Talk (under monitor mode)


Touch “” button (Pic.1) to enter into talk mode, indoor monitor can talk with the monitored outdoor unit. (S351C series).
Pick up the handset to enter into the talk mode. (S350C series).

c. Standby to Talk


Under standby mode, touch “” button (pic.1) to talk with Door 1 (S351C series).


Under standby mode, Pick up the handset enter into the talk mode. (S350C series).

d. Stop


Under talk mode, touch “” button (pic.1) to stop talk and back to standby mode.

Or wait for 90s, it will automatically stop (S351C series).

Under talk mode, touch “” button (pic.1) or hang up the handset to stop talking and back to standby mode. Or wait for 90s, it will automatically stop (S350C series).

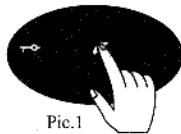


Pic.1

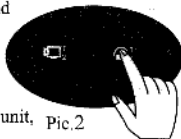




Pic.2


4. Switch outdoor units during talk

 Under talk mode, touch “” button (pic. 2) to switch and talk with another outdoor unit, and the previous conversation would be stopped automatically.

5. Unlock

a. Under talk mode, touch “” button (pic.3) to open the door. The unlock function is invalid under monitor mode (To apply the function, the outdoor units should install with electric lock).

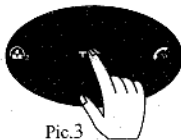


b. Under talk mode, when touch “” button, the unlock pulse time is 3s; if you touch and hold “” button, the pulse time would last 8s.




Pic.3




Operation



6. Monitor Door 1/2 /Exit

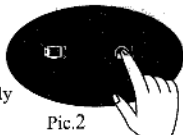- Under standby mode, touch “₂¹” button (Pic. 2) to monitor Door 1, and the screen will display “CH1”. (Under monitor mode, you can only see the image without sound, and cannot unlock the door.) The monitor mode will last about 90s before it automatically exit and back to standby mode.
- During monitoring Door 1, touch “₂¹” button to monitor Door 2, then the screen will display “CH2”. (Under monitor mode, you can only see the image without sound, and cannot unlock the door.) The monitor mode will last about 90s before it automatically exit and back to standby mode.
- During monitoring Door 2, touch “₂¹” button to exit and back to standby mode.



7. Monitor CCTV camera


- Under standby mode, touch “₂¹” button (Pic. 4) to monitor CCTV1, with “CCTV1” displayed on the screen.
- During monitoring CCTV1, touch “₂¹” button to monitor CCTV2, with “CCTV2” displayed on the screen.
- Under CCTV monitoring mode, touch “” button (Pic. 1) or wait for 90s, it will exit this mode and back to standby mode.

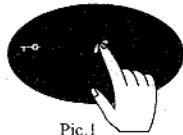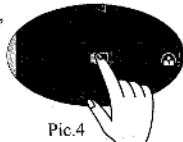

8. Ring select

Under standby mode, touch “🔊” button (Pic.5), the unit will sound the current ring tone. Each time by touching “🔊” button, you will hear different music. Choose the one you prefer, then touch “🔊” button or wait for 15s, the system will reserve the current ring tone. The selected music is for Door1, and the next one will default to Door2.


The ring tone for intercom between indoor units will sound as “DU...” at intervals, can not be changed.

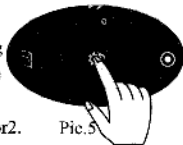

9. Volume adjust

a. Ring volume adjust

Under ring select mode, touch “🔊” button (Pic.6) to adjust ring volume. (4 grades available)

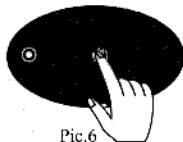

b. Touch button volume adjust

Under standby mode, touch “🔊” button to adjust button volume. (4 grades available)

10. No bother / Exit

a. Under standby mode, hold “🔊” button (Pic.6) for 2s, the unit will enter no bother mode after the unit sound “DI” .

When outdoor calls in, the monitor will only display image without ringing. Touch “🔊” button (Pic.1) to talk with outdoor units if needed.

b. Under standby & no bother mode, touch and hold “🔊” button (Pic.6), the unit will exit no bother mode after it sound “DI, DI” .

